




Installation Instructions
Center Stand
TIGER 660
2022+



Step 1: Left side. Remove the bolts from the foot rest and the centerstand bracket.
Use M8x40 bolts, do not tighten the bolts.



Step 2: Right side. Remove foot rest bolts and add spacers as seen on above photo.
Install the centerstand bracket. Use bolts M8x50.

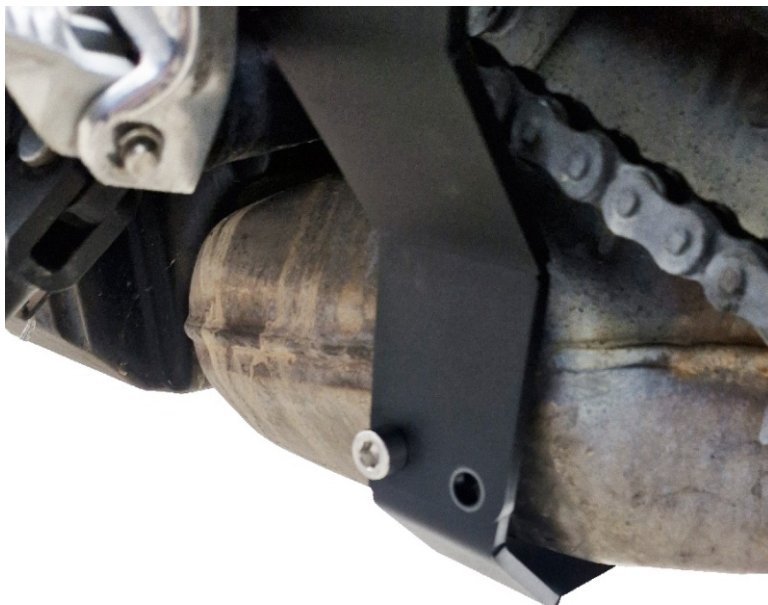

Step 3: Install connection bridge. Use bolts M10x12, add threadlocker.



Step 4: Install centerstand on both sides. Use Hex bolt M10x25 and mushroom spacer. Add thread locker.



Step 5: Use a flat screw driver to install the double spring as seen on the above photo.

Step 6: Tighten all bolts.