




COSMO

motorcycle innovating products




Installation Instructions
Crash Guards
Tracer 9 /9GT/9GT PLUS
2021-2024

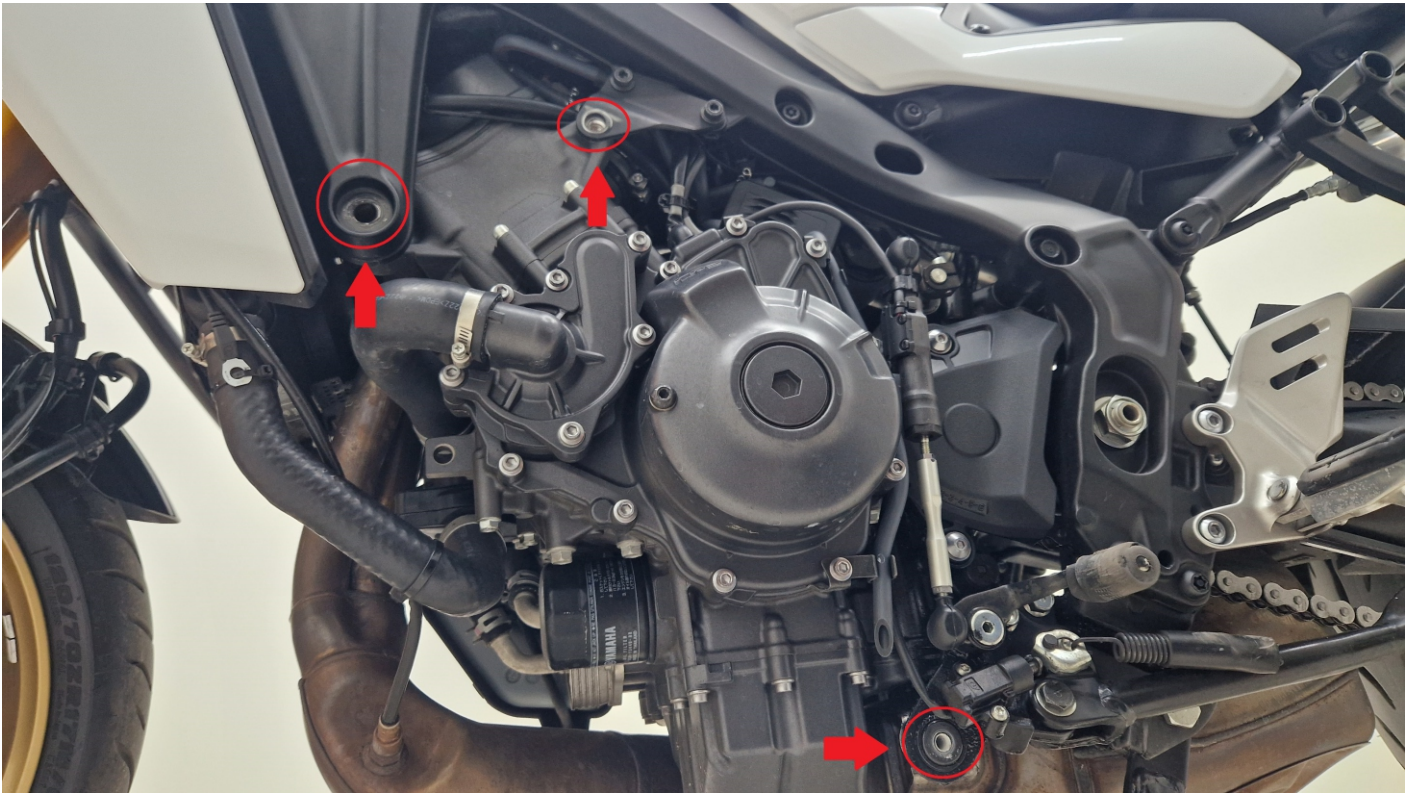

Step 1: Remove the bolts from the locations pointed by arrows on the above photo.



Step 2: Install the crashbar. Use bolts M10x60, M10x30 and M8x40

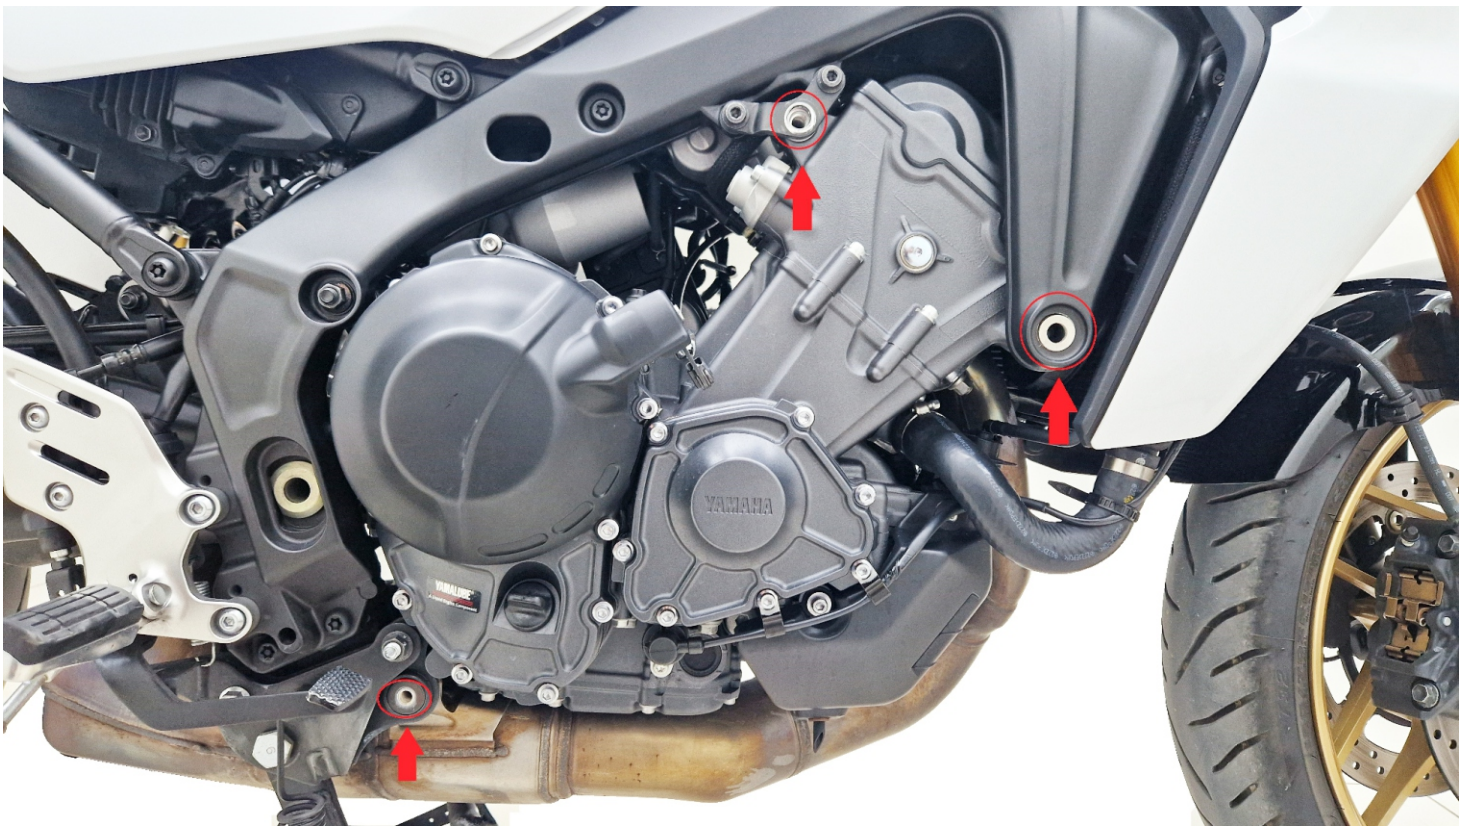

Step 3: Remove the bolts from the locations pointed by arrows on the above photo.



Step 4: Add spacers as seen on the above photos.



Step 5: Install crashbar. Use bolts M10x60, M10x40 and M8x45 with grooved edge.