



# COSMO

motorcycle innovating products

## Centerstand CB500X & NX500



## Installation Instructions



Photo 1

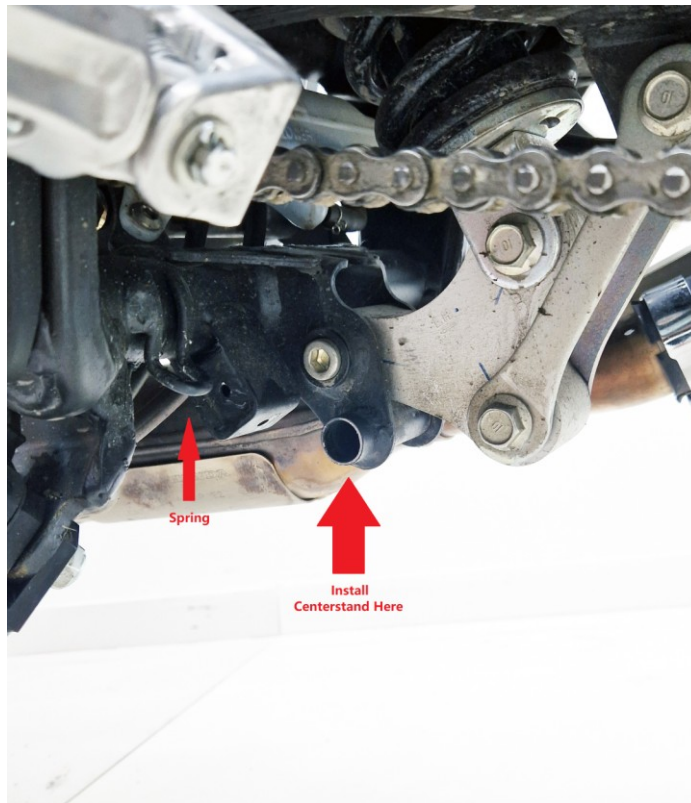


Photo 1.1

**Step 1:** Install the rubber stop as seen on Photo1. The centerstand will be installed at the point that the big arrow of photo 1.1 points at.



Photo 2

**Step 2:** Align the centerstand to the tube seen in photo 1.1 and insert the silver pin. Secure it with the supplied bolt.

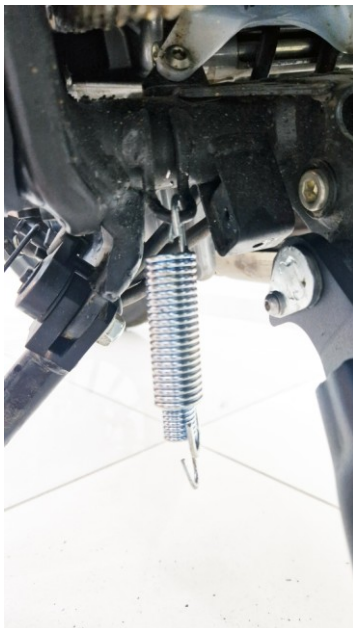


Photo 3



Photo 4

**Step 3:** Install the double spring at the position indicated by small arrow on photo 1.1, as seen on photo 3 and on the hook at the centerstand (photo 4).