

Thank You for choosing us! - Please read and understand the instructions before mounting , pay attention to our tips and info to avoid Danger.....

TOOLS

1.




5/6mm allen key

PARTS


1.




2.

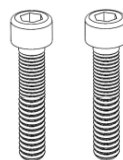

3.

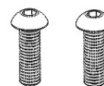

4.

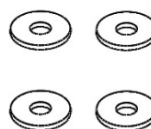

Nº	Part Name (Description)	Quantity
1	Accessory Bar	1
2	Bolt - M8 x 55 mm	2
3	Bolt - M8 x 25 mm	2
4	Washer - M8	4

1.

Locate the **4x Bolt Threads (2 per side)**
Begin Installation on the **Right side**



2.

Pass the Accessory bar **under the cooling hose**
With the **help of a friend** try to do the same on the **Left**

Pass the accessory bar through the
Left side before fastening any bolts



Place a cardboard or any other
protective sheet to your radiator



3.

FASTEN

Fasten the **2 M8 bolts [2] + 2 washers [4]** as shown **[hand tight]** using a **6mm Allen**




You will have to uncover the rubber protection

4.

FASTEN

Fasten the **2 M8 bolts [3] + 2 washers [4]** as shown **[hand tight]** using a **5mm Allen**

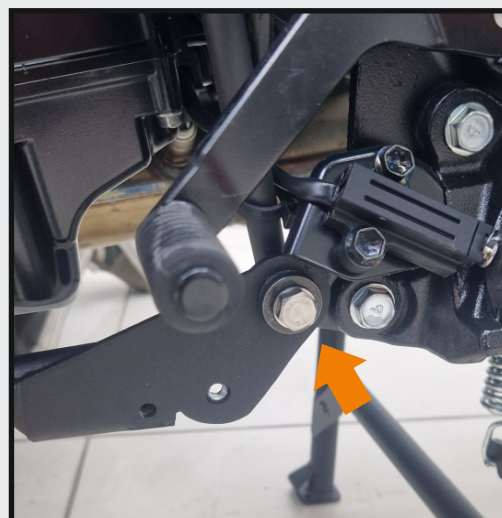

In our latest version we Provide Allen Bolts
Do not be worried the installation is the same

5.

Fasten tightly / securely all bolts

Torque down All 4xM8 Bolts

We recommend 20NM or check owners manual



General Information - Please Pay close attention in order to avoid any injury or damage.

This product has been designed and manufactured for vehicles in stock form. We can not guarantee the compatibility with accessories from other manufacturers unless is specified otherwise. (If its possible we will provide this info - email us for more).

Mounting and maintaining our products requires from you good technical skill and proper tools. We suggest the assembly to be done by a qualified workshop. if you choose to DIY and not fully understand any part of the assembly please consult us for any additional info.....

* Before beginning: Make sure that your vehicle is in a stable position, that it is cool enough to work on and have a second person to assist you.

* Secure all bolt threads with thread glue unless is specified otherwise.

* For tightening torques that are not defined you must reference the vehicle's manual or its manufacturers service center.....

** After completing the installation ensure that no moving parts are obstructed. and that the vehicle works fully as intended.....

*** Carry a meticulous functionality test before your first ride. Check that every bolt is torqued correctly .Check again after 50km and at then at a regular intervals.

*** Metal accessories can change the handling feeling of a motorcycle .Be cautious until it becomes natural.....

For any additional questions consult us at: info@cosmo-accessories.com

