





## Honda Transalp 750 Centerstand Installation Instructions



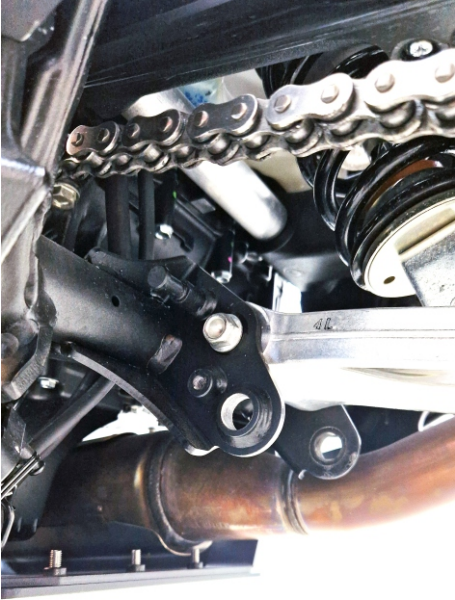

### Step 1:

Install the centerstand between the mounting holes and secure it with the axle. Use the M6x12 to secure the axle on the frame.

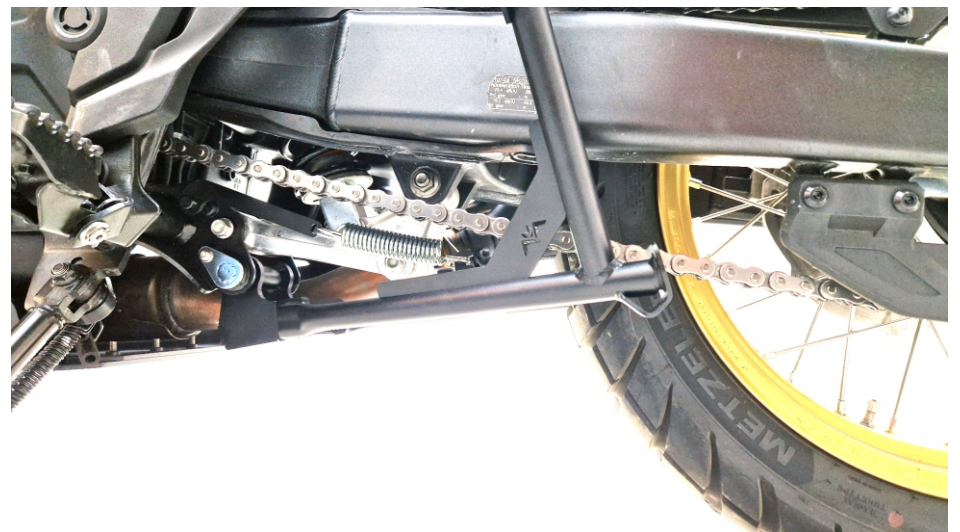

### Step 2:

Attach the P shaped bracket to the rod above the axle. Attach the spring to the bracket and use a flat screw driver to secure it on the centerstand hook.