




## Centerstand Yamaha Niken



## Installation Instructions

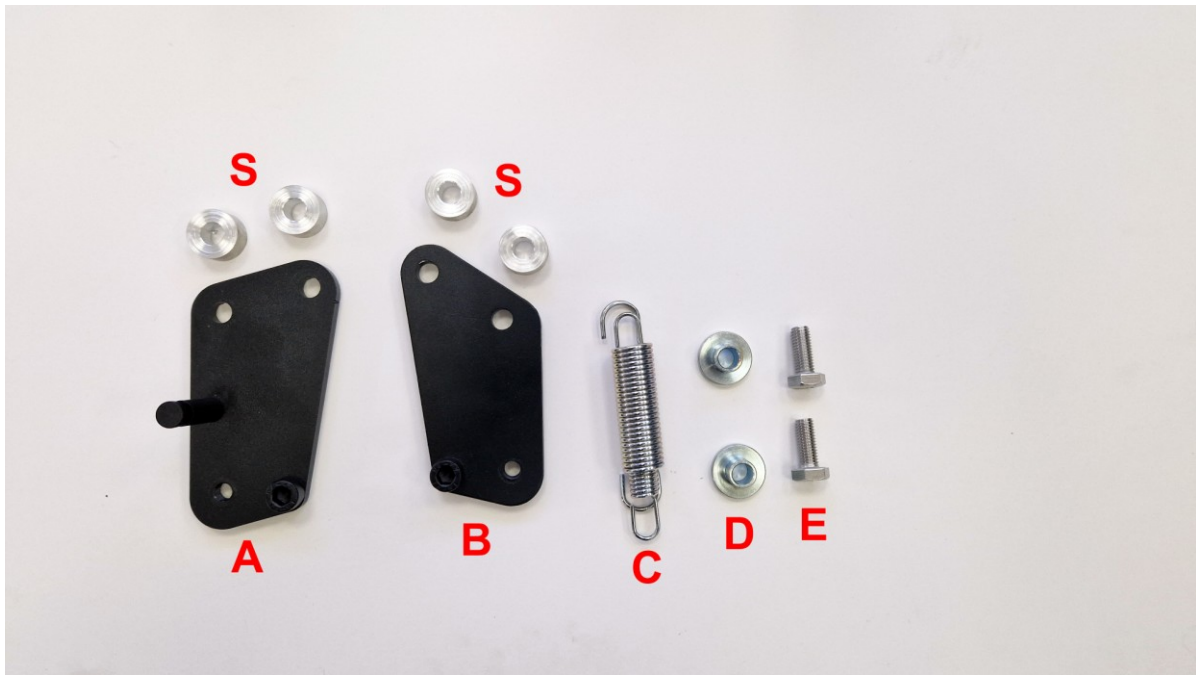

## Parts to be Installed


Parts to be installed



Photo 1

**Step 1:** Remove the gear level by removing the bolt that hold it in place (bolt F photo 1).

Remove sub-frame connection from both sides. Also remove the 2 brackets that hold the tube.

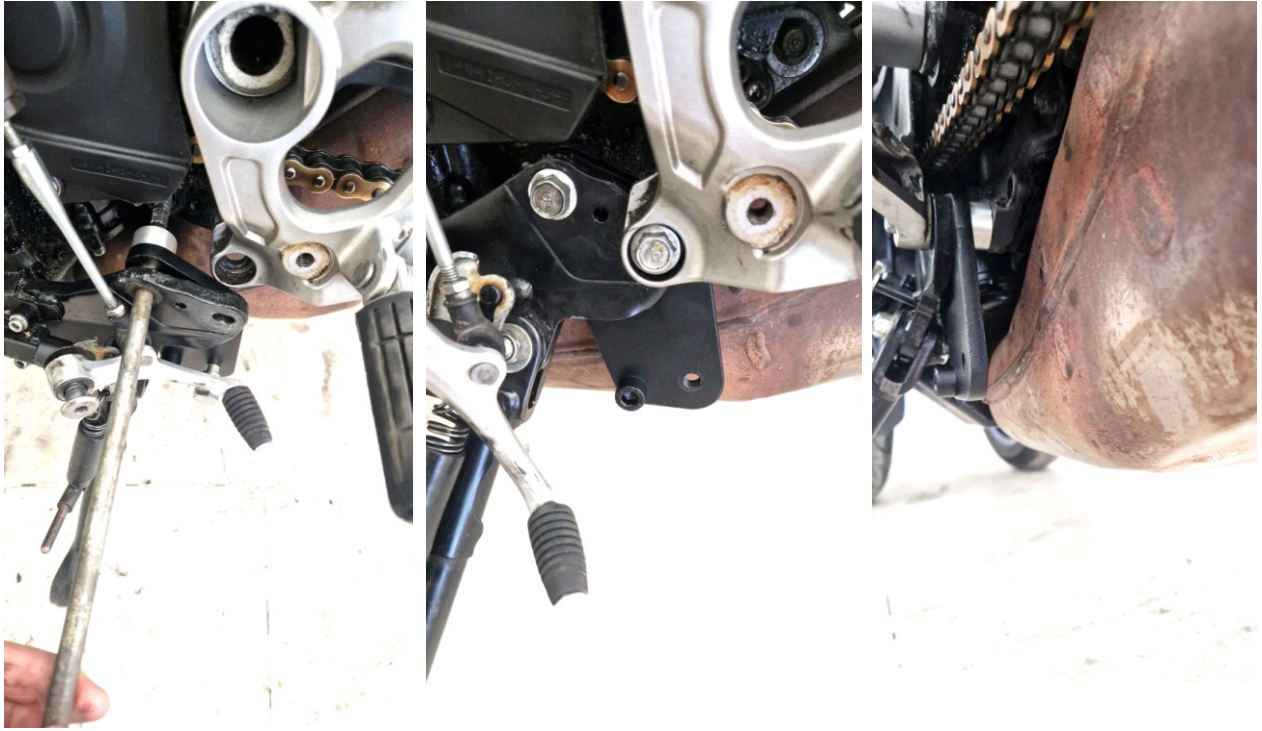

**Photo 2**

**Step 2:** Install **part A** to the left side of the bike (gear lever side) as seen at photo 2. Use **Spacers S** and stock bolts from step 1.



**photo 3**

**Step 3:** Install **part B** to the right side of the bike (brake lever side) as seen at photo 3. Use **Spacer S** and stock bolt from step 1.



Photo 4

**Step 4:** Install the centerstand on both sides as seen at photo 4. Use **Bolts E** and **Spacers D**.

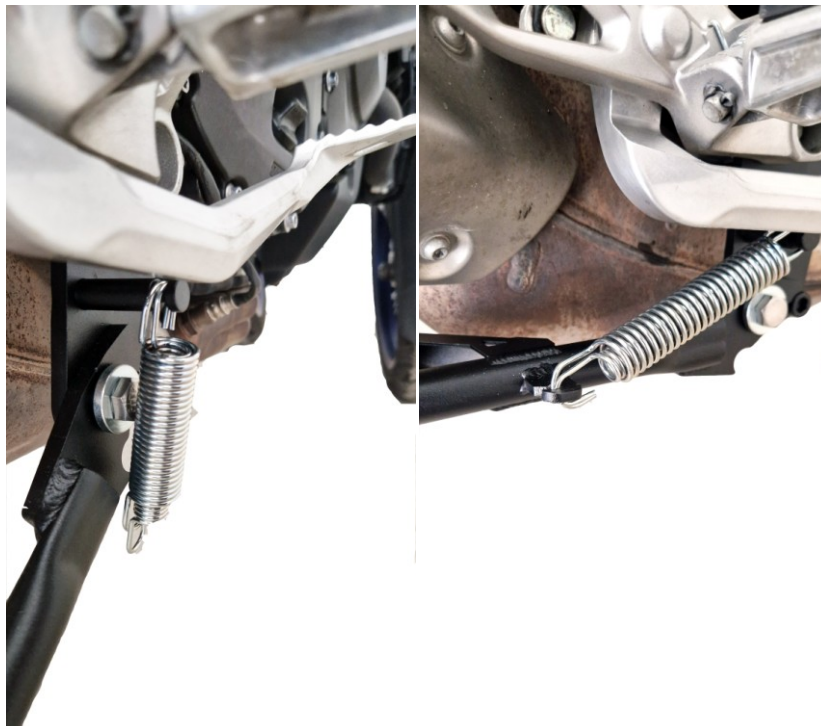


Photo 5

**Step 5:** Install the **Spring C** as seen at photo 5. Use a flat screw driver to drag it and install it at the lower side.



**Photo 6**

**Step 6:** Have the bike on the centerstand and tighten all bolts.

Re-Install the gear level.