



Radiator Guard

V-strom 650 2012-2019

Installation Instructions





Photo 1

Step 1: Remove the rubber protection.

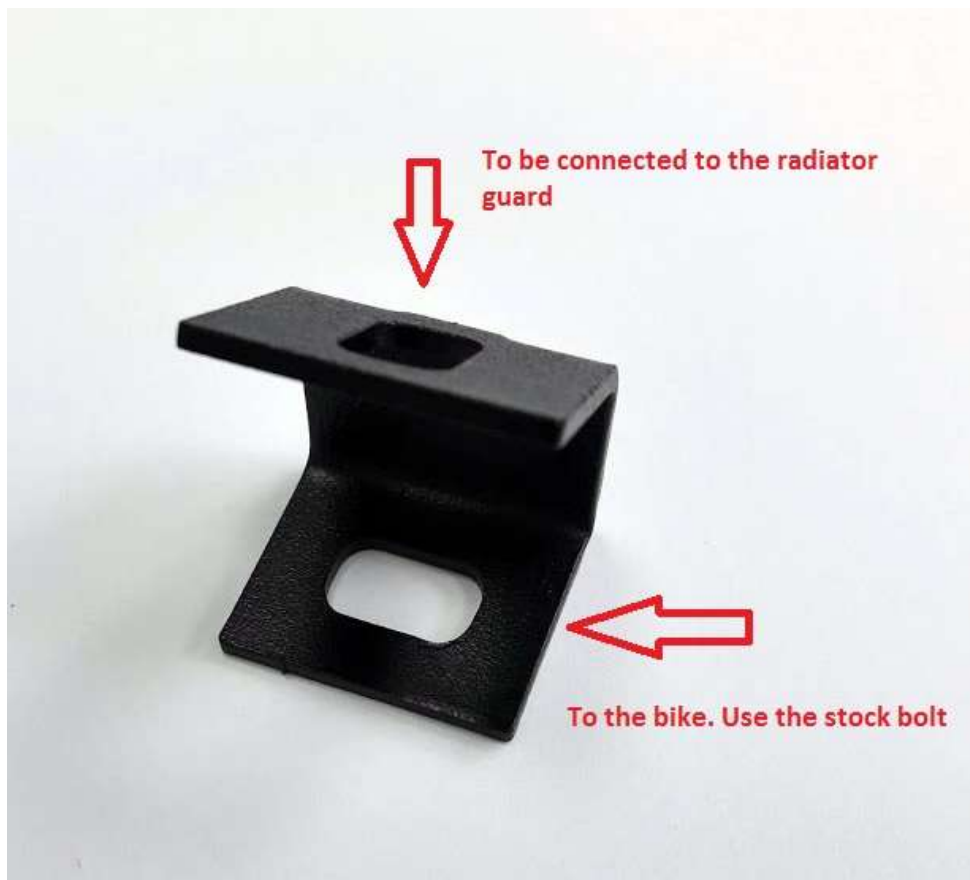


Photo 2

Step2: Install the bracket on the bolt behind the rubber protection using the stock bolt.

Step3: Install the guard as shown on photos 3,4,5 and 6 using the supplied bolts.



Photo 3



Photo 4



Photo 5

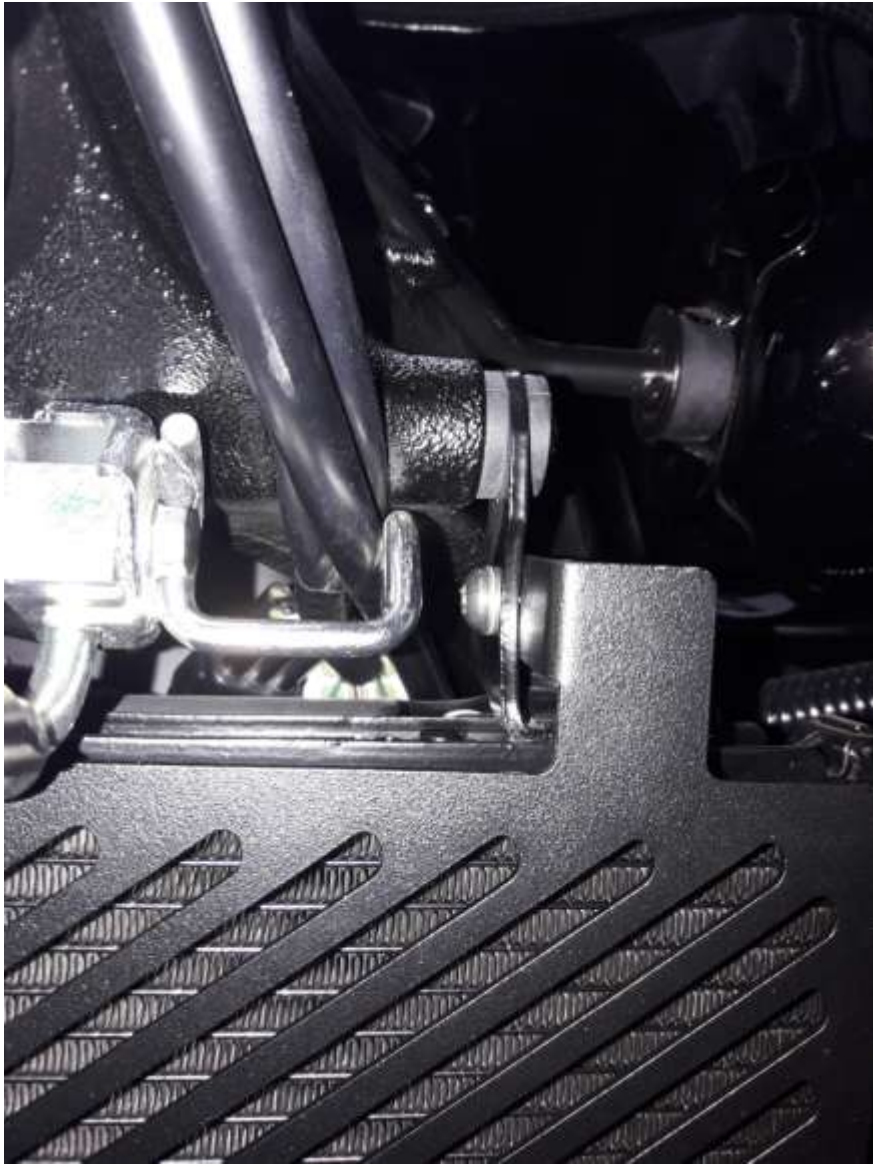


Photo 6