





**Step 1:** Remove OEM skidplate and skidplate bracket from both sides.

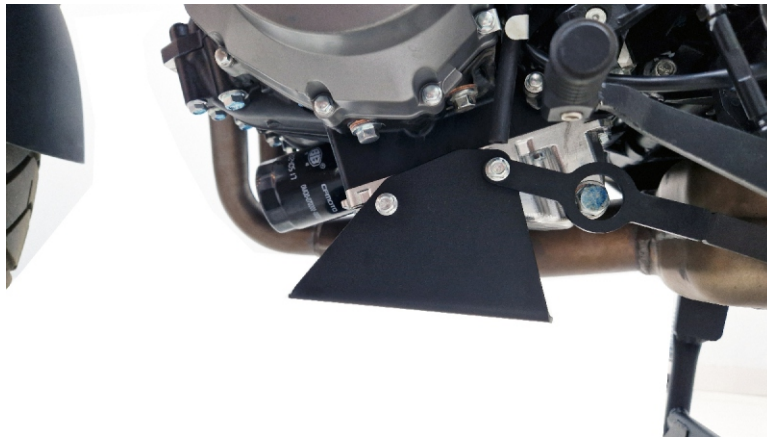

**Step 2:** Install the skidplate bracket. use the same bolts.



**Step 3:** Install the skidplate. Use M6x20 bolts.

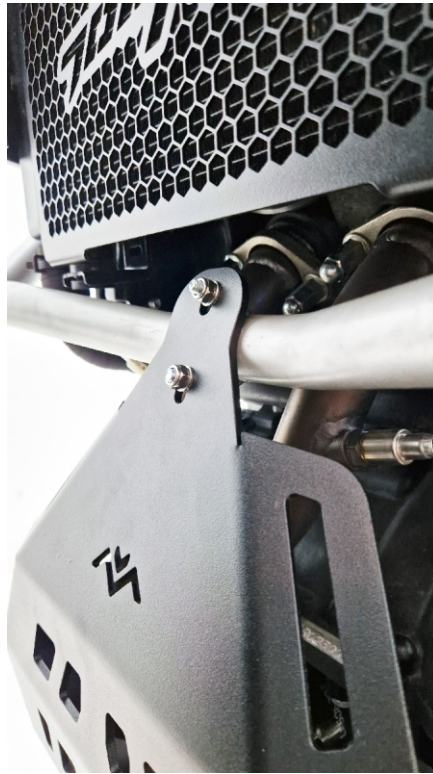

**Step 4:** Use the U-bolt to secure the skidplate on the crashbar.

