





## Honda Transalp 750 CrashGuards Installation Instructions



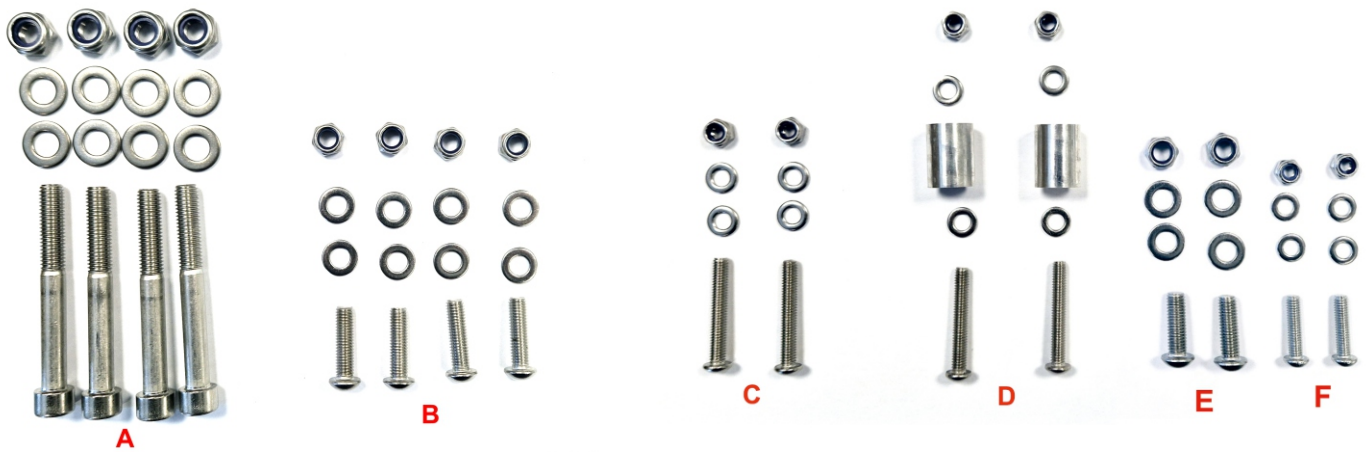

## Bolt Sets

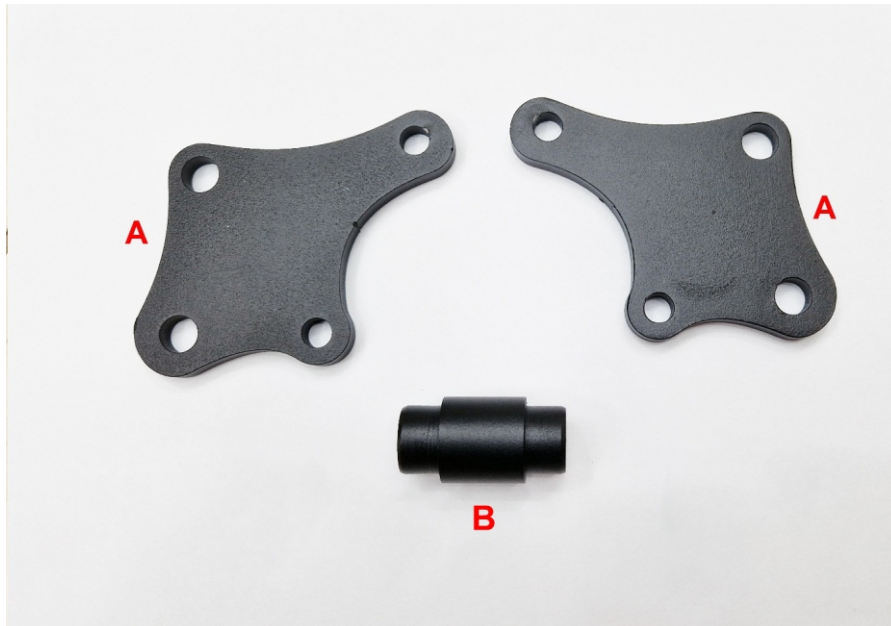


## Brackets and Spacer



**Step1:**

Remove fairing from both right and left side.  
Remove bolts and pins indicated in the above photos.

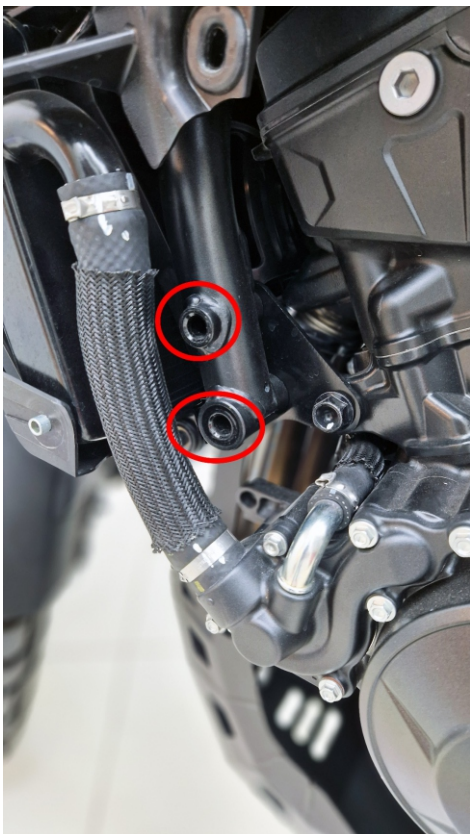

**Step2:**


Remove bolts from the  
holes indicated in the photos.  
Left side and Right side.





Step3:

Install bracket A.  
Use 2x bolt set A on every side.  
Left side and Right side.

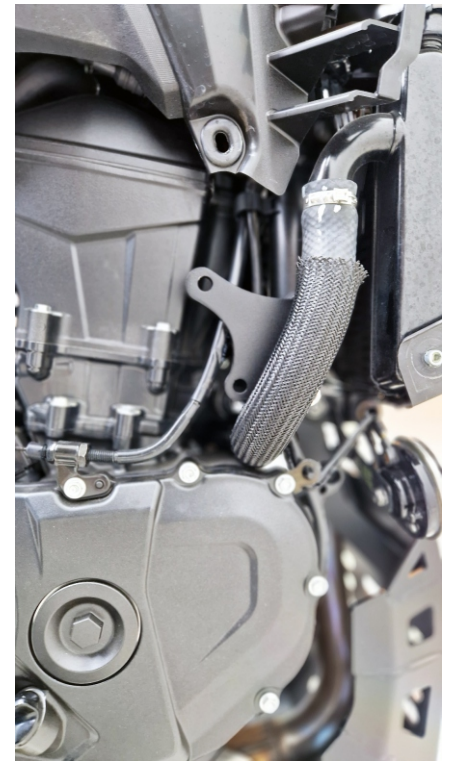

## Lower set installation



Step4:

Install lower set on the right side.  
Use 2x bolt set B and 1x bolt set E.



### Step5:

Install lower set on the left side. Remove the hose holder and reinstall it along with the crashguard.

Use 2x bolt set B, 1x bolt set E and 1x Bolt set F.

## Upper set installation



### Step6:

Remove the bolts from Bracket A.

Skip this step if you don't have the lower crashbar set installed.



### Step7:

Install upper right side first.  
Use 2x bolt set C at the top side. Use only the bolt and one washer at each hole.  
Connect the crashbar to Bracket A.  
Use 2x bolt set B.



### Step8:

Install left side.  
On top side secure it in place with the leftover washers and nuts from step 7.  
Connect the crashbar to Bracket A. Use 2x bolt set B.  
Add bolt set D.  
Add spacer B.  
Tighten all bolts.