

## Parts to be installed.



Photo 1



Photo 2

**Step 1** Remove Fairing and crashguard from the right side. Also remove the bolts seen in red cycle.



**Photo 3**

**Step 2:** Remove fairing from the left side.



**photo 4**

**Step 3:** Remove foot rest by removing the bolts within cycle.

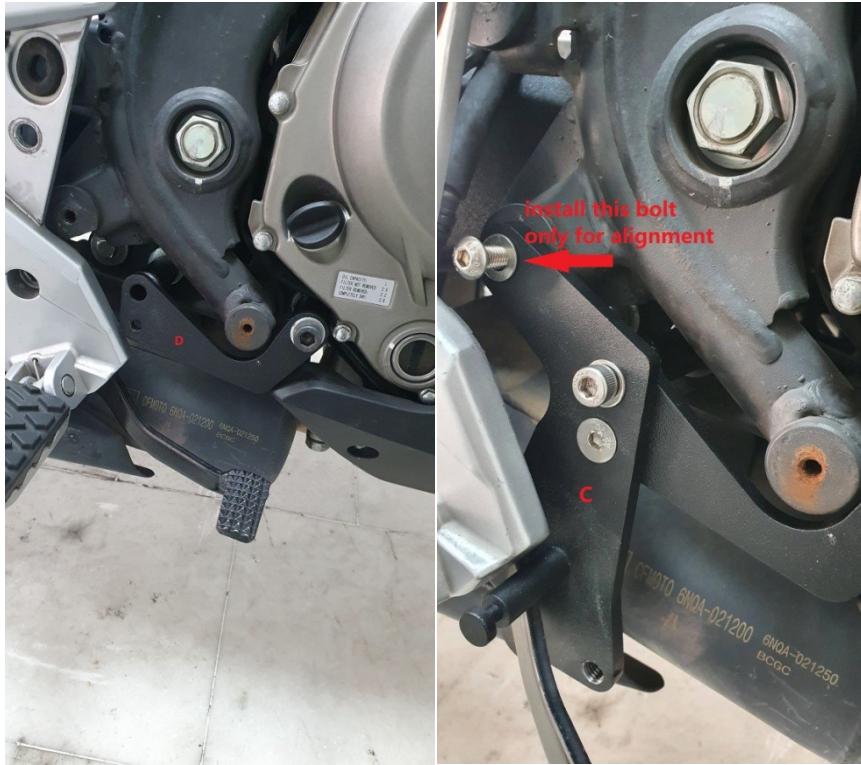


Photo 5

**Step 4:** Install part D and Part C as seen on photo 5. For part D use the M10x300 bolt. And the M8x110 bolt. The top bolt of part C is installed in order to align the part. Remove it to install the foot rest.

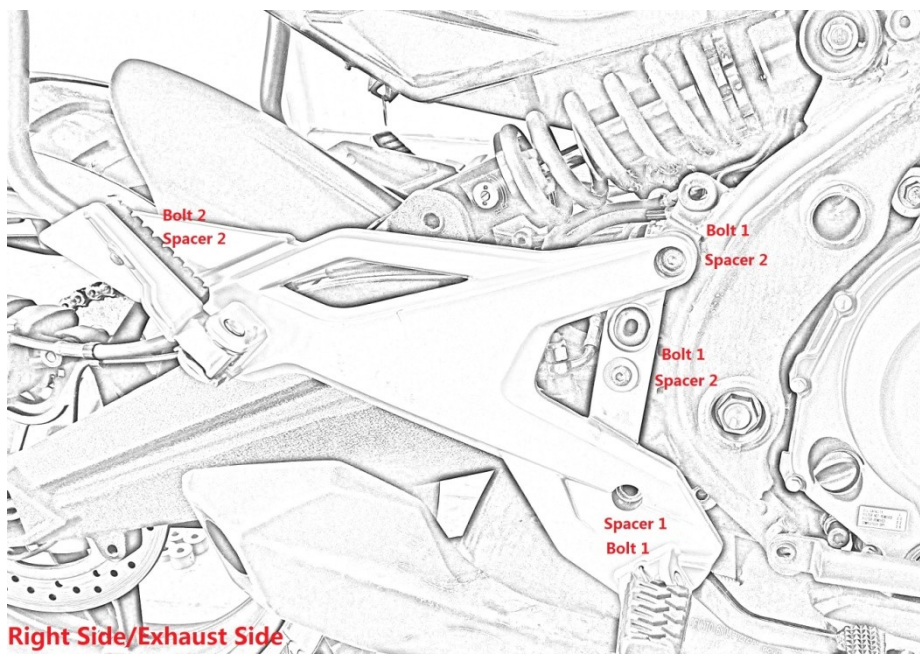


Photo 6

**Step 5:** Install foot rest on right side. Use bolt 1 and bolt 2 and Spacer 1 and Spacer 2 as seen on photo 6.



Photo 7

**Step 5:** Install part B. As seen on photo 7. Do not tighten the nut yet.

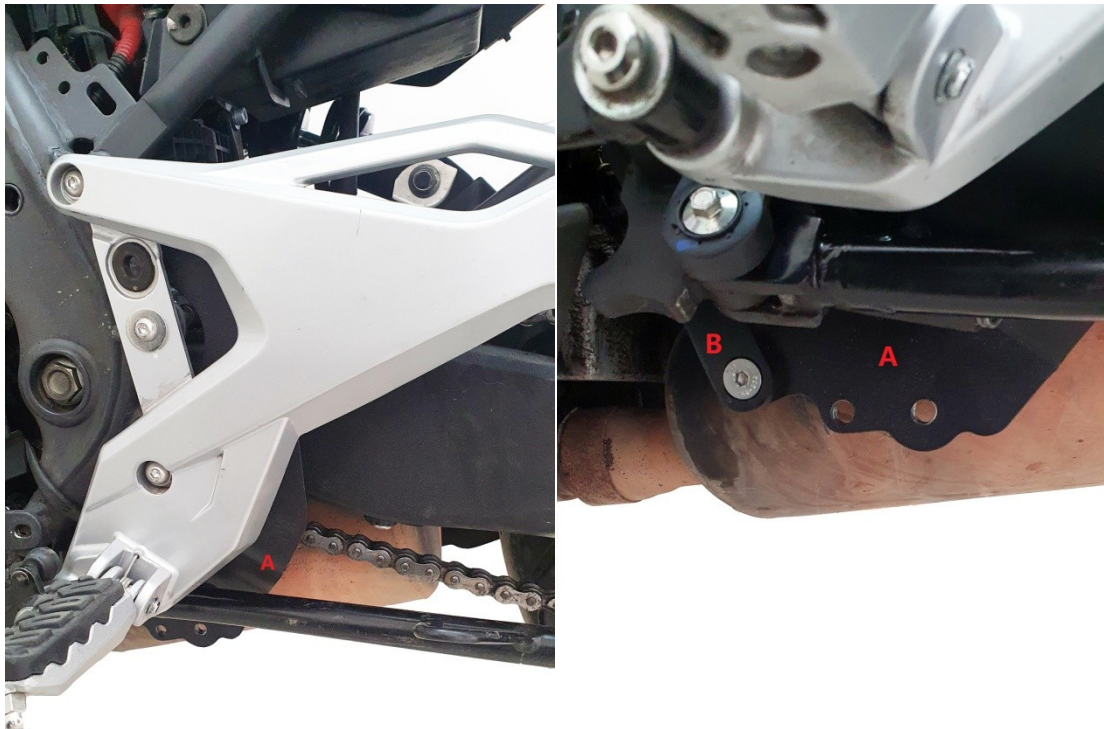


Photo 8

**Step 6:** Install part A. Bolt Part B on part A as seen on photo 8 and tighten all bolts and nuts.

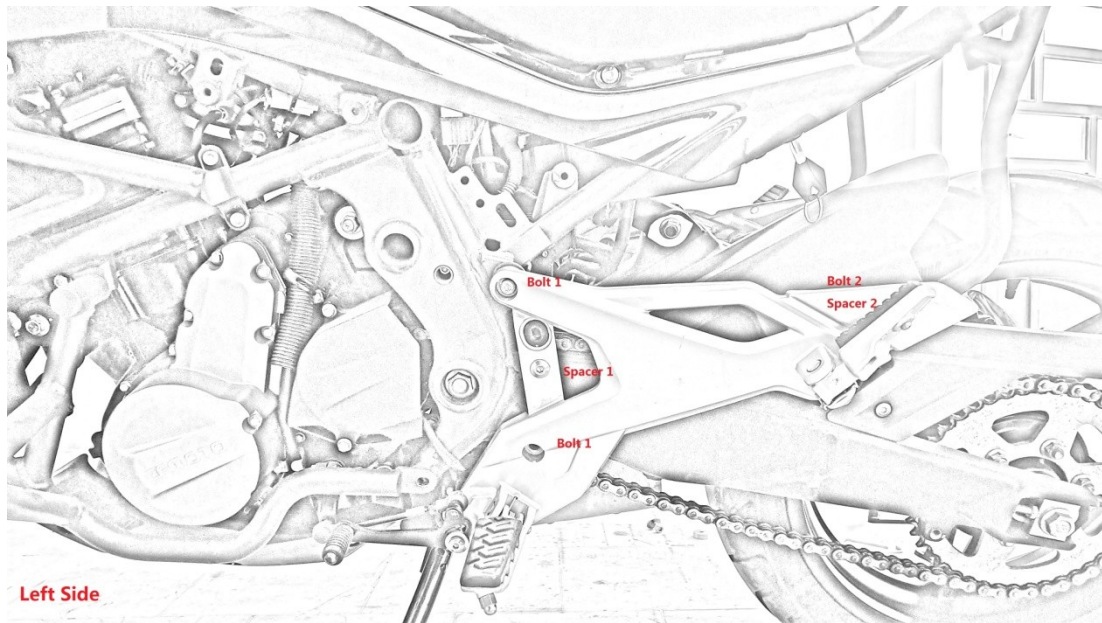


Photo 9

**Step 7:** For installing part A use Bolt 1 and Bolt 2 and Spacer 1 and Spacer 2 as seen on photo 9.



Photo 10

**Step 8:** Photo of the rear bolt with spacer at the upper point of the foot rest. Spacer 2-Bolt 2



Photo 11

**Step 9:** Place bolt 3 and Spacer 3 as seen on photo 11. Bolt and washer on the outer side. Use grease between spacer 3 and stand.



Photo 12

**Step 10:** Install the stand on part A and part D. Use thread locker on the bolts.



**Step 6:** Install both springs (small inside the bigger one).