




COSMO

motorcycle innovating products

Centerstand Voge 300DS



Installation Instructions

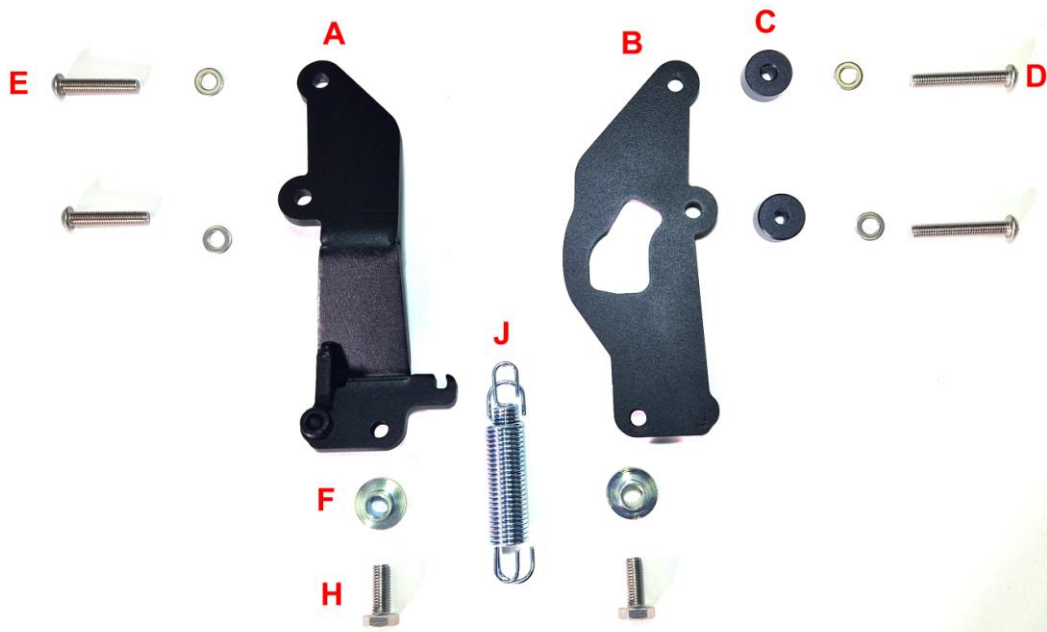

Parts to be installed

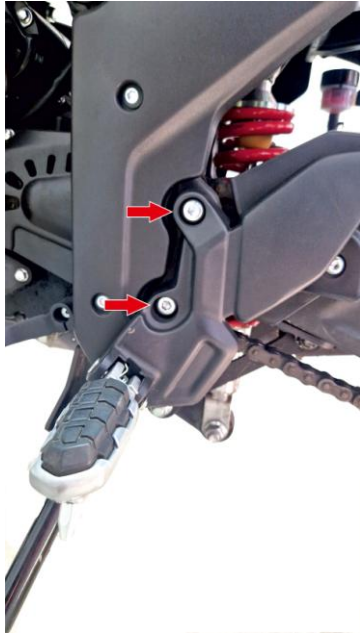


Photo 1

Step 1: At the left side (gear lever side) remove the bolts that hold the foot rest.



Photo 2

Step 2: Install **part A** between the footrest and the frame. Use **bolts E** and washers as seen at photo 2.

Do not fully tighten the bolts. The part A must have a 1-2mm play.



photo 3

Step 3: Install **part B** to the stand as seen in photo 3. Use **spacer F** and **bolt H**.

Use thread locker on the **bolt H** and grease at **spacer F**.

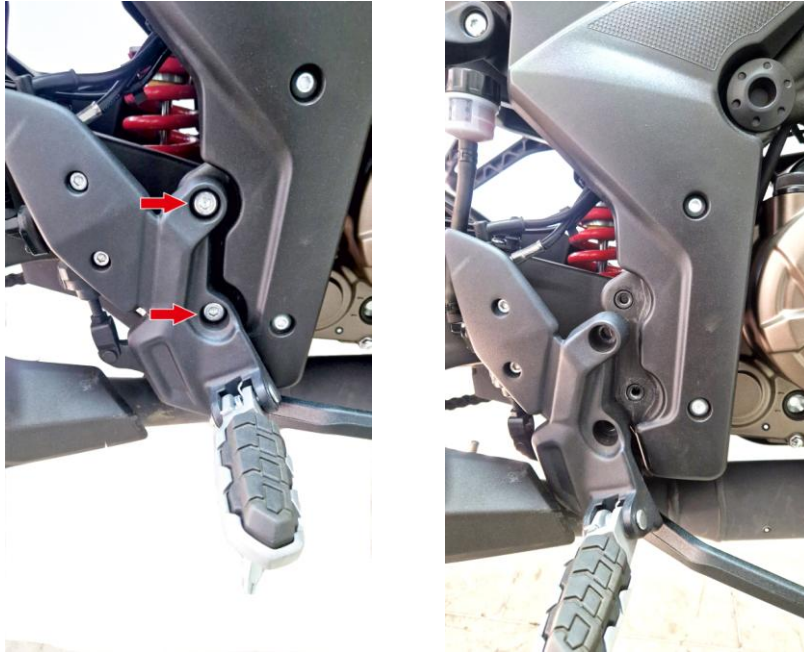


Photo 4

Step 4: At the right side (brake lever side) remove the bolts that hold the foot rest.

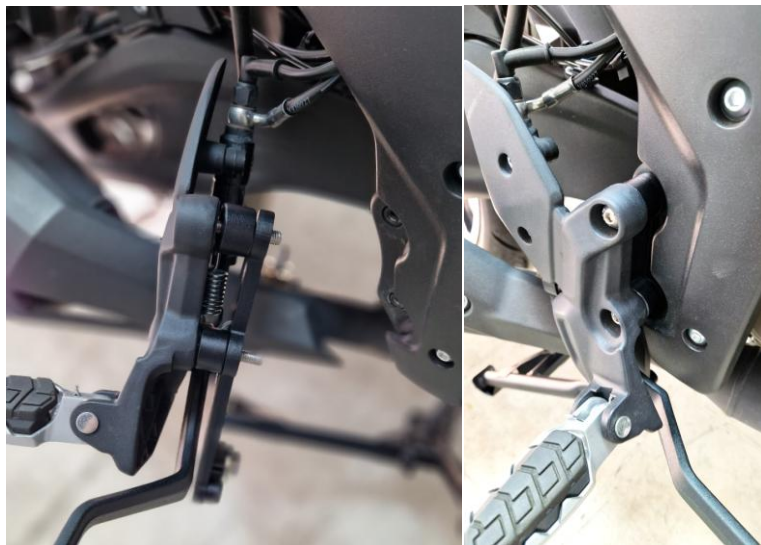


Photo 5

Step 5: Install the stand (photo3 /step3) as seen at photo 5. Use **spacer C**, **bolt D** and washers.

Do not fully tighten the bolts. The part A must have a 1-2mm play.

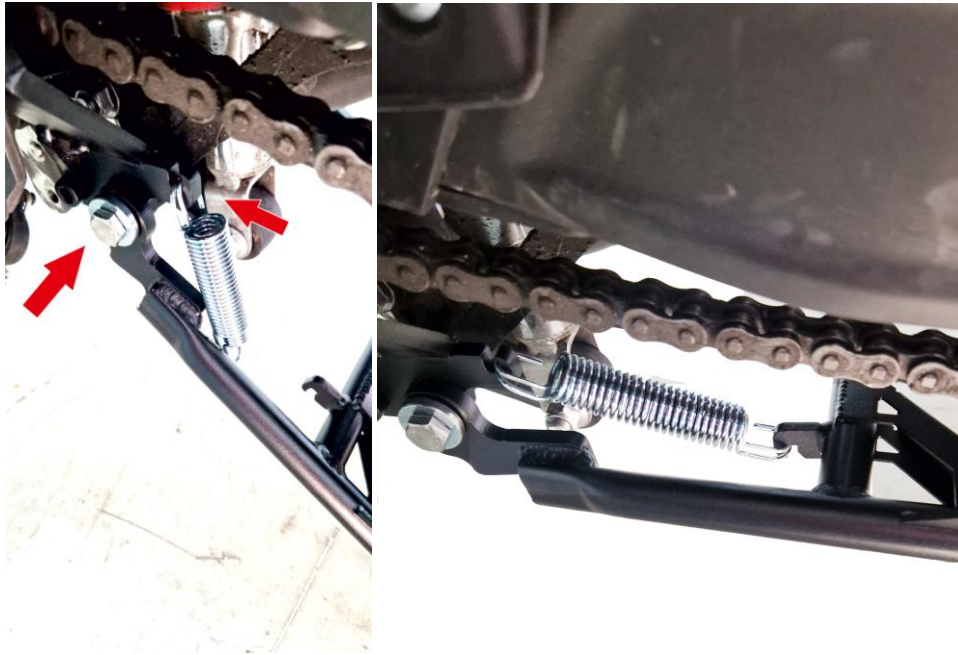


Photo 6

Step 6: At the right side connect the stand to **part A**. Use **spacer F** and **bolt H**.

Use thread locker on the **bolt H** and grease at **spacer F**.

Step 7: Also attach the spring to the hook of **part A**.

Use a flat screw driver to attach the other end of the spring to the stand.



Step 8: Position the bike on the stand and tighten **bolts E** and **bolts D** from **step 1** and **step 5**.