

Parts to be installed.



Photo 1

Part 1: 1pc

Part 2: 4pcs

Part 3: 4pcs

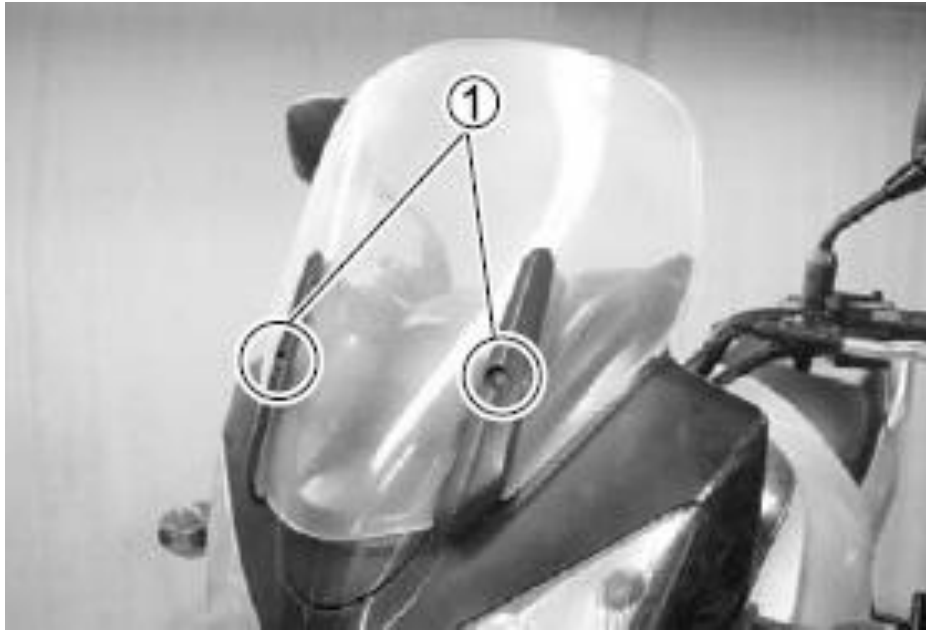


Photo 2

Step 1: Remove the wind screen covers.

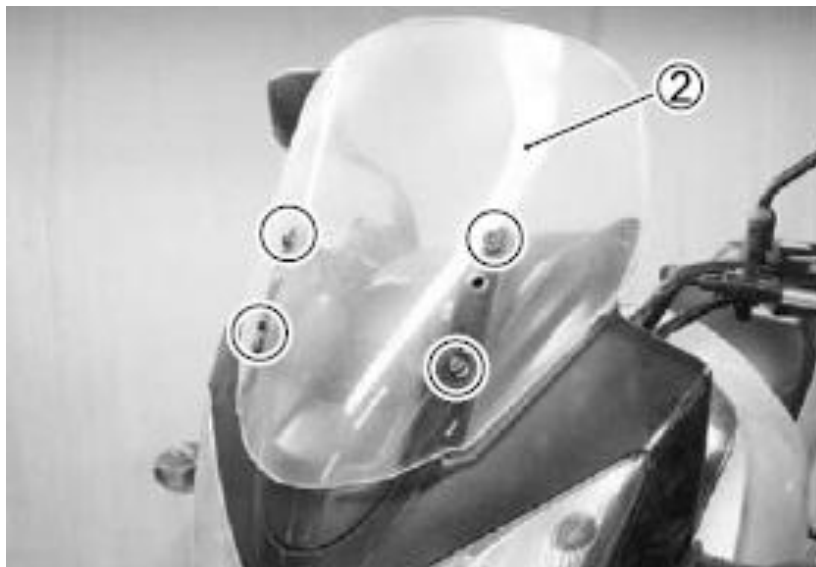


Photo 3

Step 2: Remove the wind screen.

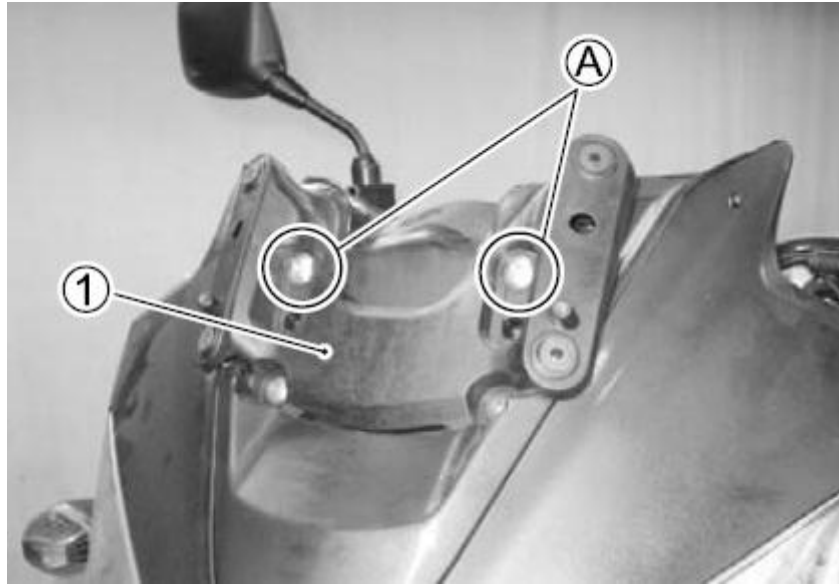


Photo 4

Step 3: Remove the top bolts (A).

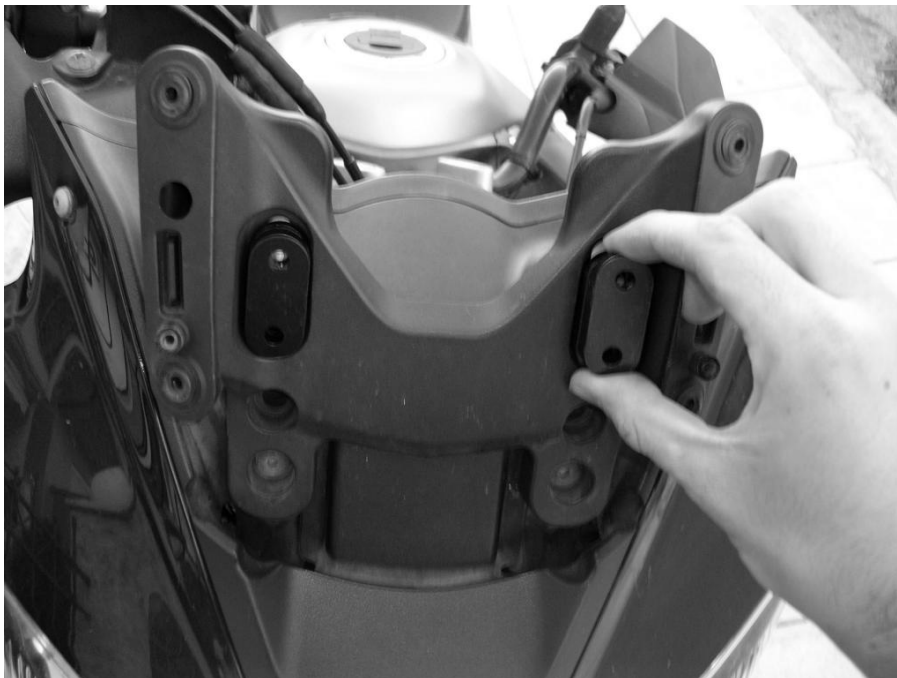


Photo 5

Step 4: Place the spacers. Two (2) at each side.



Photo 6

Step 5: Place the holder plate as shown in photo 6. Install the bolts.



Photo 7

Step 6: If you have set the wind screen too high, use the supplied nuts to tight the top bolts.

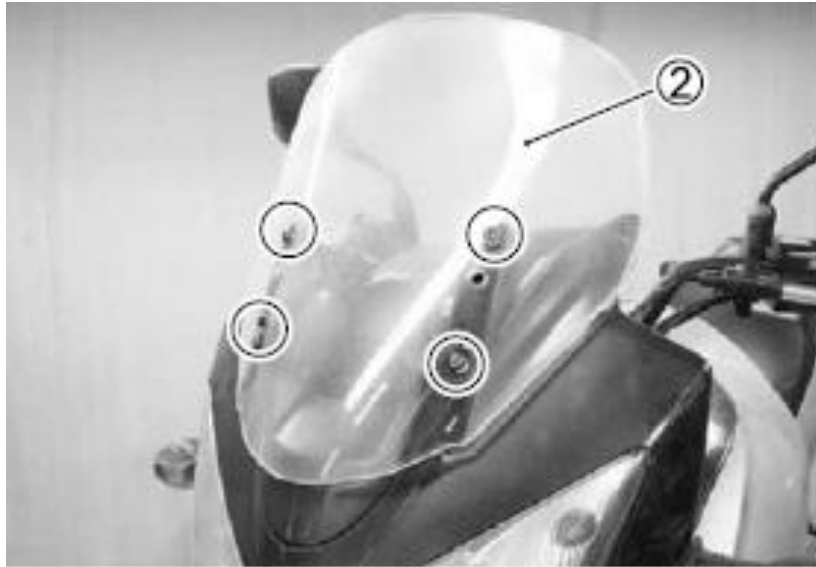


Photo 8

Step 7: Install the wind screen.

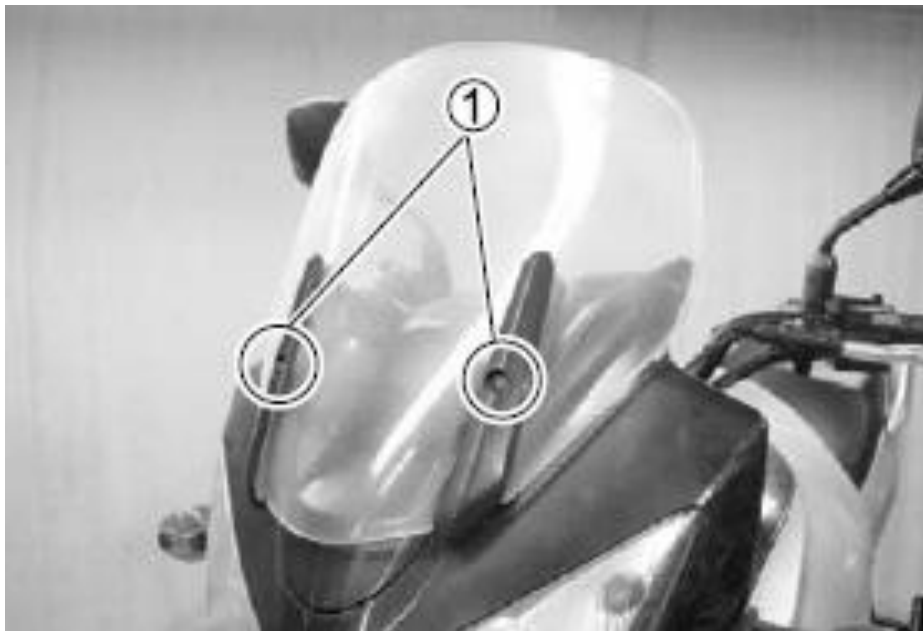


Photo 9

Step 8: Install the wind screen covers.