



# COSMO

motorcycle innovating products

## Centerstand Tiger 900GT and 900GT Low



## Installation Instructions



Photo 1

**Step 1** Install the bolt and nut (as seen on photo 2) at the right side of the bike (rear brake side) There must be a 3mm (1/8inch) gap between the nut and the head of the bolt. The spring will be hooked on this bolt. Secure the nut against the frame.



Photo 2

**Step 2:** The stand will be installed on the holes seen at photo 2.



photo 3

**Step 3:** On the right side (brake lever side) the stand will be installed on the inner side of the frame (between frame and exhaust). On the left side (gear lever) the stand will be installed on the outer side. As seen on photo 3.

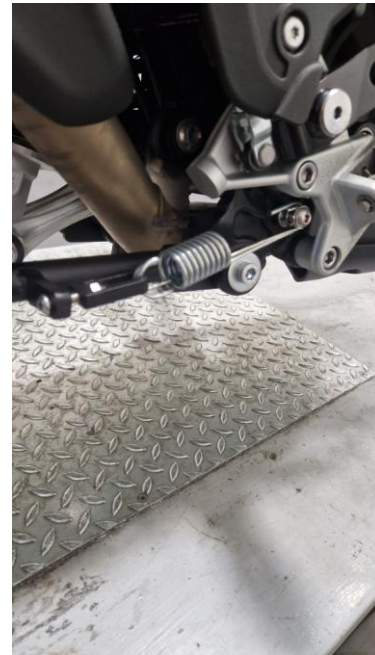


Photo 4

**Step 4:** Insert the spacer in the hole of photo2 (add grease) and install the bolt and washer as seen on photo4.



**Photo 5**

**Step 5:** Hook the spring on the bolt (installed at step1) and the other end at the bracket seen at photo 5. Tighten the bolt until the bracket is secured.



**Photo 6**

**Step 6:** Add grease to the spacers periodically.