



**C-RACER**  
www.c-racer.com

# INSTRUCTION

Model	Product	Code
BMW K75/100 82-95	Scrambler/Café Racer Front Side Covers	FSC-BMWK


No modification required on your motorcycle in order to install this product.  
Read the instructions carefully before proceeding with the steps provided below.  
It is required to have the front fork bridge because that is the point where the fender will be attached.  
**It is advisable that these actions are performed by specialized personnel.**

## CONTENTS

- 2 X Plastic Cover
- 2 X screws ~~8x5~~ (allen-roundhead-washer)
- 2 X screws ~~6x8~~ (allen-roundhead-washer) 2 X adaptors ~~8x2x0~~
- 2 X slide clips M6
- 2 X washers 5X12 (plastic)
- 2 X washers 6X18 (plastic)




Remove the old plastic. Remove the rubber washers that are located on the side of the reservoir tank and place instead the two M6 slide clips that you will find in the installation pack.

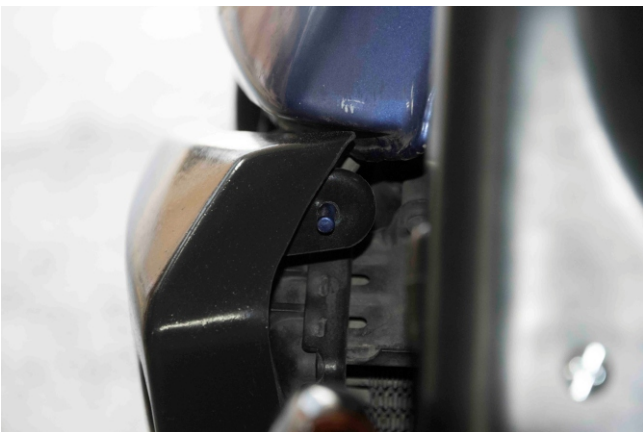

Place the plastic cover in position and make sure that the bolt located on the front side of the reservoir tank is clipped in the socket found on the plastic cover – as shown in photo No2.



3-4

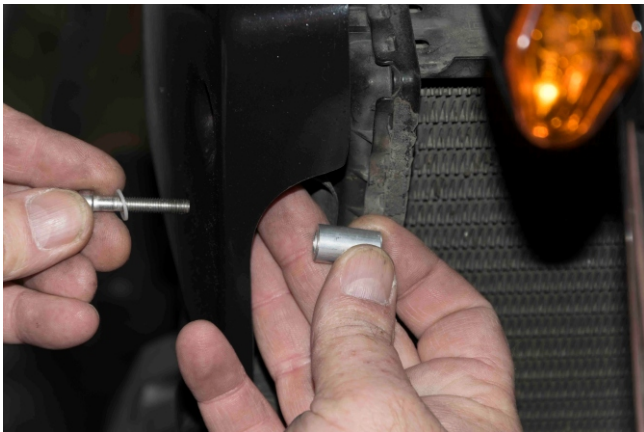

Take the adaptor (8X12X20) and hold it behind the plastic over; at the front hole slide through the screw ( M5X30) with the washer (5X12) and screw it in place with your hand on the thread (coil) that's on the motorcycle. See photos 3-4.

5



Use the other M6X15 screw on the clips that you have already placed at the rear hole and secure tightly both screws.



The end result is as shown in the photos above.  
Thank you for choosing one of our products.

**The product is for race use only**

For any further information please do not hesitate to contact us: Tel.: +30 2108075387 Email: [info@c-racer.com](mailto:info@c-racer.com)