



## ΟΔΗΓΙΕΣ – INSTRUCTION



**ΜΟΝΤΕΛΟ- MODEL :** YAMAHA FJR 1300  
**ΠΡΟΪΟΝ – PRODUCT :** ΠΡΟΕΚΤΑΣΗ ΦΕΡΙΝΚ  
FAIRING EXTENDER  
**ΚΩΔΙΚΟΣ – CODE :** FE-YFJR1300

<b>ΠΕΡΙΕΧΟΜΕΝΟ CONTENTS</b>	Πλαστικό φτερό 2 τεμ. Λαμάκι (ΥΤDM3) 2 τεμ. Βίδες M6X15 2 τεμ. Κλιψ M6 1 τεμ μονωτικό	Plastic Seat Cover 2 pcs metal support 2 pcs screws M6X15 2 pcs clips M6 1 pcs tape
<b>ΠΡΟΔΙΑΓΡΑΦΕΣ MATERIAL SPECIFICATIONS</b>	Το υλικό που είναι κατασκευασμένο το προϊόν είναι πλαστικό <b>ABS</b> με ακριλική εξωτερική επίστρωση. Μπορεί να τοποθετηθεί χωρίς να γίνει επιπρόσθετη βαφή. Όλες οι εταιρείες χρωμάτων διαθέτουν συστήματα για την βαφή τέτοιων υλικών. Απευθυνθείτε στην εταιρεία που συνεργάζεστε να σας υποδείξουν τον σωστό τρόπο βαφείς.	The product's material, made of <b>ABS</b> plastic with acrylic exterior layer, can be placed on your bike without requiring painting but if you want it painted, all paint companies have equivalent machinery at their disposal. If you want to paint it yourself, you should contact them to inform you on what you will need and how to do it.

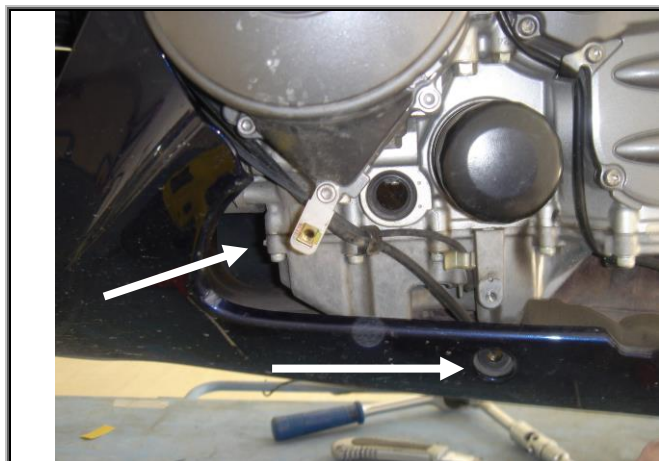


Photo No 1

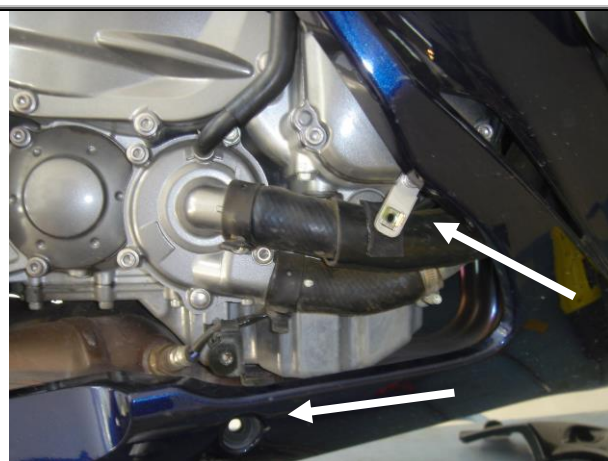


Photo No 2

### ΤΟΠΟΘΕΤΗΣΗ

- Κουμπώστε τα κλιψ στις τετράγωνες τρύπες πάνω στα λαμάκια.
- Ξεβιδώστε την κάτω βίδα που συγκρατεί το φερίνκ.
- Τοποθετήστε το λαμάκι στην βίδα που δείχνει η (φώτο Νο1) αριστερά.
- Κάντε το ίδιο και από την δεξιά πλευρά (φώτο Νο 2). Βάλτε τη μονωτική ταινία πάνω στην σωλήνα του νερού ακριβώς πίσω από το λαμάκι.
- Πριν σφίξετε τις βίδες βάλτε το πλαστικό στην θέση του για να ελέγξετε αν τα λαμάκια έχουν την σωστή κλήση και μετά σφίξτε καλά τα λαμάκια στήριξης.
- Τοποθετήστε το κομμάτι στην θέση του, έτσι ώστε η κάτω βίδα του φερίνκ να συγκρατεί μαζί και το κομμάτι και βιδώστε το κανονικά.

### PLACEMENT

- Snap Clips in the square holes on the metal support .
- Unscrew the bottom screw that holds the fairing.
- Place the flat chisel the screw shows (photo # 1) left.
- Repeat on the right side (photo No. 2). Put the tape on the pipe the water directly behind the metal support.
- Before you tighten the screws put the plastic in place to check if the metal support have the right call, and then tighten the metal support.
- Place the piece in place so that the bottom screw fairing to hold together the piece and screw it properly.

Για οποιαδήποτε πληροφορία επικοινωνήστε μαζί μας.  
Τηλ.: 210 8075387  
Email: tech@hld.gr

For any farther information please do not hesitate to contact us:  
Tel.: +30 210 8075387  
Email: tech@hld.gr

