

INSTALLATION INSTRUCTION

Model	Product	Code
HONDA Monkey 125	Front Fender & fork Guard in Silver & black color	FFS-FG-HM-S & FFS-FG-HM-B



CONTENTS

1. 1pcs Plastic wing
2. 2 Aluminum Guards (FG-HM)
3. 2pcs Metal parts (Set LD2-FF-HM 2pcs)
4. 1pcs Stand for tubes (A-FFS-FG-HM)
5. 8pcs M6X12 allen oval screws
6. 4pcs screws M6X40 allen oval
7. 1pcs M6X20 Allen screws
8. 8pcs M6 lock nuts
9. 1pcs nuts with cover M6
10. 4pcs washers 6X12 pcs
11. 4pcs washers 6X18
12. 4pcs counters $\Phi 12\Phi 8\Phi 22\text{mm}$
13. 2pcs foams 10X2X55mm

MATERIAL DESCRIPTION

The product is made of:

The wing is made of ABS plastic in glossy black colour.

The Fork guards are made of aluminum 3 mm thick and painted in black or silver with electrostatic paint (FFS-FG-HM-S & FFS-FG-HM-B).

The rest of the parts are made of DKP metal 2mm thick and painted black with electrostatic paint.

The base for the tubes is made of acetal in black color and CNC machined.

The screws, nuts, washers and all the rest required for the installation are galvanized in silver color.




These are the contents you will find inside product packaging. Also in the package you will find a card containing the link to download the PDF file with the installation instructions detailed step-by-step with photographic material.

Before starting the installation, read the instructions to have a better idea about the tools you will need and the required skills. Otherwise we suggest to contact a professional.

The product is for race use only

For any further information please do not hesitate to contact us: Tel.: +30 2108075387 Email: info@c-racer.com

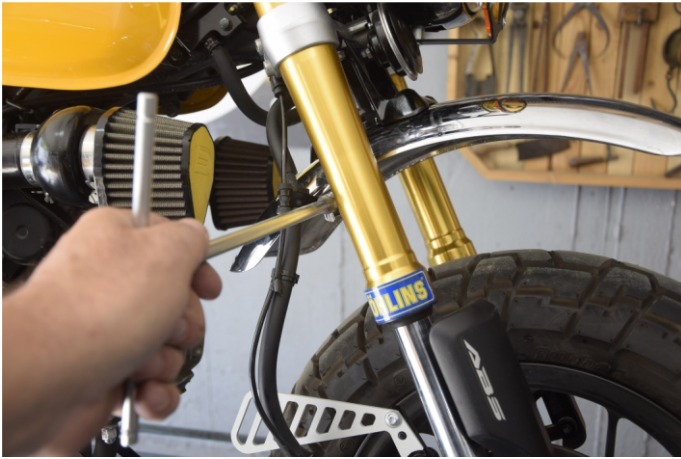

Unscrew the screw that holds the tubes for the front brake and ABS.



Unscrew the 3 screws holding the front fender from the bottom of the fender and remove it from the motorcycle.



Remove the base the fender was screwed. It has 4 Allen screws on the 4 corners of the base.



Remove the supporting brackets from the front tube brake. To do so you need to open it as shown at the photograph.



Remove the two screws holding the guard in place of the front suspension. Do the same on the other side.



Now you have to prepare the fender before mounting it. First place the 2 supporting brackets on the fork guards, as shown in the photo.



Then place it on the fender. Use the screws provided in the package. Align it and tighten it well.



The bottom will be as you see in the photo.



To complete the preparation, stick the adhesive foam on the new base to prevent any damage on the front suspensions.



Place the fender between the front suspensions, as the photo shows.



Pass the adapter between the bottle and the reed guard and tighten the screw without tightening it. Place the adapter between the suspensions and the fork guard and screw it (not tightly).



Do the same for the top screw. Continue with the other side and after you put all the screws, check if it is aligned, then tighten all screws.



Finally screw the base for the brake pipes. Place it directly under the old stand as shown the photograph.



This will be your final result. Enjoy your rides!

