## **MOUNTING PROCEDURE**

KIT WINDSHIELD SUZUKI GSX-S 1000 '15

SG1300/15

## KIT


- X1. PLEXIGLASS

- X1. SPECIFIC BRACKET
  X4. SPECIAL WASHER
  X4. SCREW "ROUND HEAD" 5X12
  X2. SCREW "ROUND HEAD" 8X40
  X2. WASHER Ø 6 SQUARE
- X2. NUT Ø 6
- X2. SPACER
- X4. WASHER TEFLON Ø 5
- X4. RUBBER WASHER X4. WASHER Ø 6 "LARGE"

WWW.BARRACUDAMOTO.COM

## MOUTING PROCEDURE:

- REMOVE THE INDICATOR COVER OUTLINE AND PROCEED TO THE MOUTING;
- PUT THE SPACER TOGETHER WITH THE "B" BRACKETS AND LOCK INTO THE HIGHLIGHTINING POINTS;
- JOIN THE "A" AND "B" BRACKET LIKE THE SCHEME AND PUT THEM ON THE INDICATED POINTS;
- FIND THE RIGHT POSITION OF WINDSHIELD ON THE BRACKET ALREADY FIXED AND PROCEED TO LOCK ALL THE SCREWS LIKE THE ILLUSTRATED SCHEME

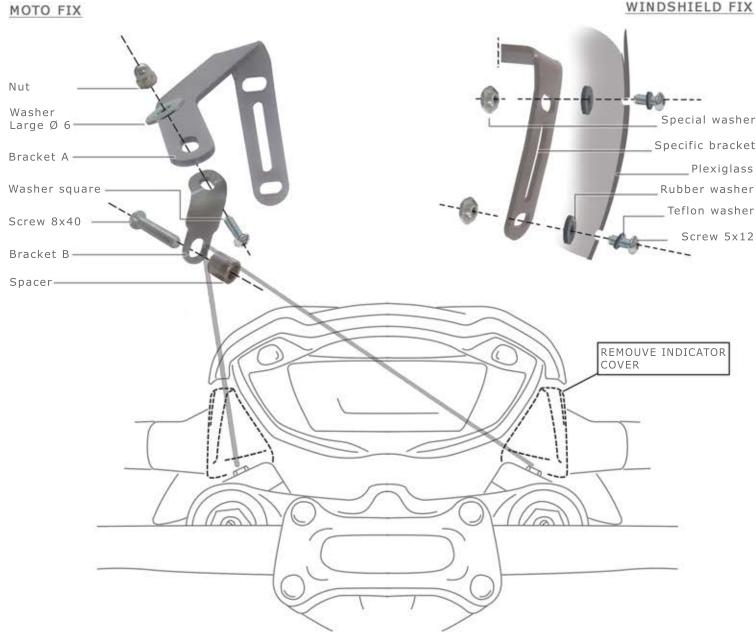

NOTE: DON'T LOCK TOO MUCH TO AVOID PLEXIGLASS BROKEN