




INSTRUCTION


Model	Product	code
SUZUKI SV 650 2016+	SIDE NUMBER PLATES	SNPSV

CONTENTS

- 2 X plastic side covers
- 2X metallic brackets (L-SSNP1)
- 2X metallic brackets (L-SSNP1)
- 4 X screws M6X12 cross-flat head
- 4 X clips M6
- 4 X plastic washers M6X18
- 2 X Velcro sets (35X25)

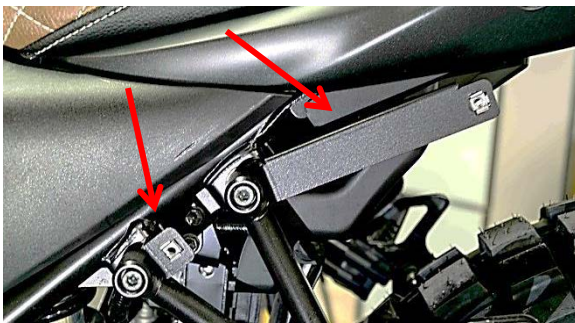

Place the clips on the brackets and undo the screws holding the rear footpeg.
Place the brackets as shown in the photo.
Before tightening make sure cover and brackets are in the correct position.

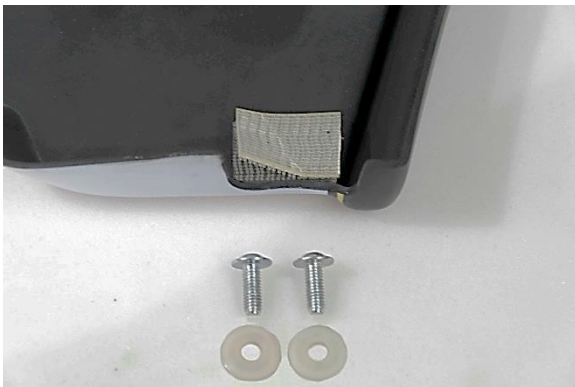

Clean the plastic thoroughly, and place a Velcro set on the plastic as shown in the photo. After that remove the Velcro's protective tape.



Screw the plastic in place by pressing it on the point shown in the left-hand photo, so that the Velcro sticks well on the footpeg's base.

Do the same on the other side.