


Installation Instructions
Skidplate
CF Moto 700MT
2025




Step 1: Remove OEM skidplate and skidplate bracket from both sides.

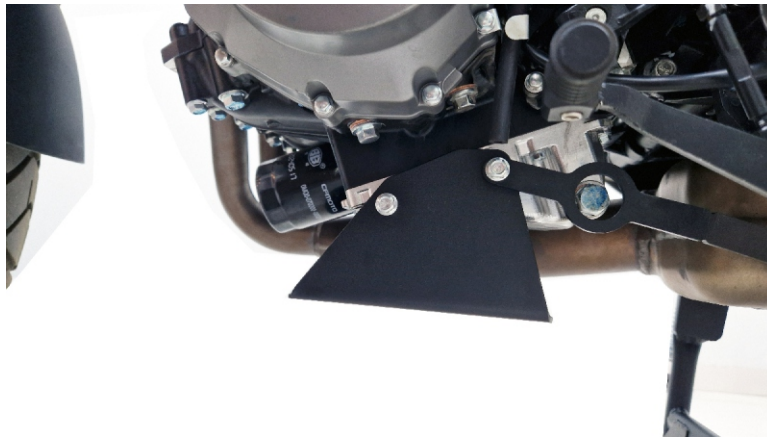

Step 2: Install the skidplate bracket. use the same bolts.



Step 3: Install the skidplate. Use M6x20 bolts.

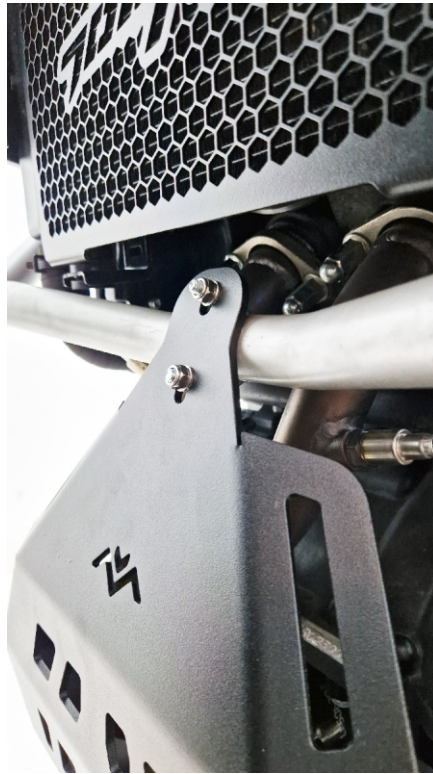

Step 4: Use the U-bolt to secure the skidplate on the crashbar.

