



## **FORK BRACE**

### **Installation Instructions**

Parts to be installed.



Photo 1

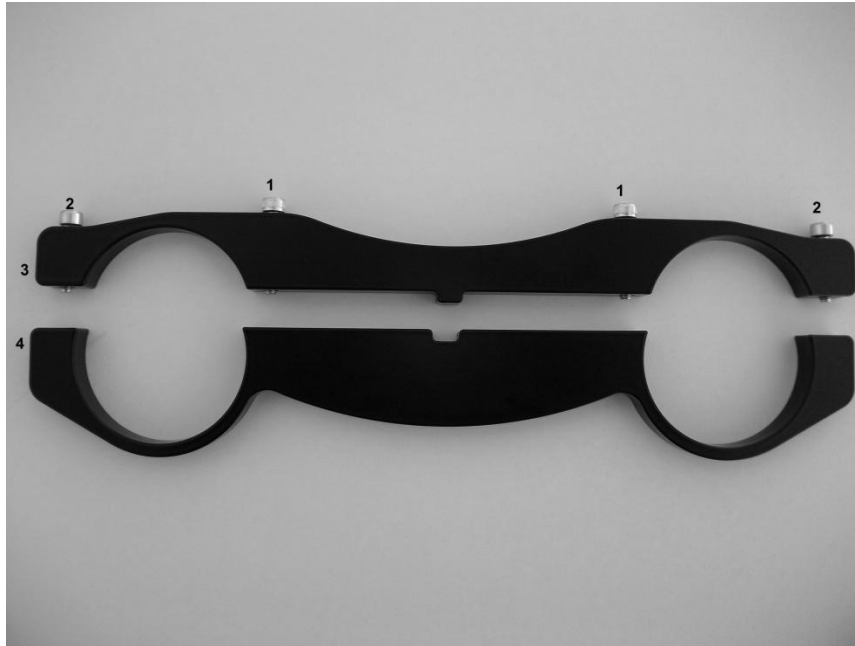


Photo 2

Step 1: Remove the bolts 1 and 2 (photo 2). Have the parts 3 and 4 apart.



Photo 3



**Photo 4**

Step 2: Slide piece 4 down as the photo 3 and photo 4 shows.



**Photo 5**

Step 3: Align the part 3 as the photo 5 shows and screw the bolts 1 (photo 2) by hand.

Step 4: Screw the bolts 2 (photo 2) by hand.

Step 5: Tight the bolts 1 (photo 2) to 5Nm (old model <3/2014 4Nm).

Step 6: Tight the bolts 2 (photo 2) to 5Nm (old model <3/2014 4Nm).